GUIDE 26 – SMARTFIX (Pre-Glazed) Installation Process Schematic.

PROCESS STEP 1

- *Locate Glazed panel in its final position against the the face of the existing window frame*
- *Present Toggles to their final position (toggle should fit snugly against Smartframe).*
- *Mark drill hole position in face of existing window frame (most easily) with Bradawl).*

PROCESS STEP 2

- *Remove SMARTFIX Glazed Frame to allow access to marked positions of Toggle pilot drill holes.*
- *Drill **dia.2mm** pilot hole (to accept No.6 x 25 Screw)*
- *Mark drill hole position in face of existing window frame (most easily) with Bradawl).*

PROCESS STEP 3

- *Secure bottom (2) and (1) side Toggle in position with No.6 x 25mm screw.*
- *Present SMARTFIX panel to existing window and locate in position against the (3) secured toggles*
- *Secure remaining toggles in position and rotate toggles to lock SMARTFIX panel in place.*
- *Fit Toggle caps to toggles.*

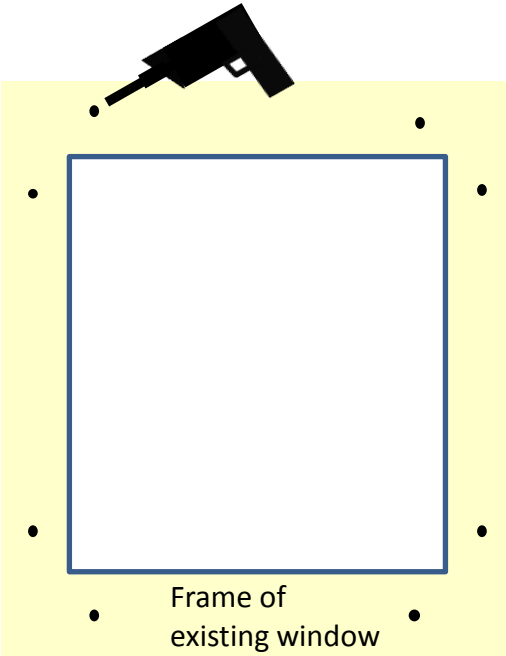

1 - **PROCESS STEP**

- Toggle